

SUNSHINE INSTRUMENTS




RACER Stopwatch

Instruction Manual

FEATURES

- Stopwatch: 1/100 second
- Time display: Hour, Minute, Seconds
- Calendar display: Day, Date, Month
- Alarm

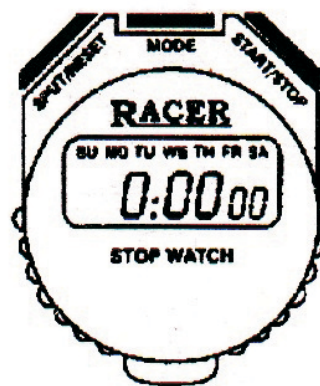

STOPWATCH FUNCTION

Press Mode Button once, if the Stopwatch is on Time Mode, to bring it to Stop Watch Mode.


SU MO TU WE TH FR SA
0:00:00



Press Start/Stop Button to start the Stopwatch. Press Start/Stop Button again to stop the Stopwatch. Press Split/Reset Button to reset the Stopwatch to zero.

TIME/CALENDAR/ALARM DISPLAY MODE

In normal mode it will display Time of the day in Hour, Minute, Seconds and the day of the week.

SU
PM 8:20:30



By pressing and holding Split/Reset Button it will display time for which alarm is set and if alarm is on  sign will appear.

By pressing Split/Reset and Start/Stop Button together the alarm can be switched on or off  sign will appear if alarm is ON and  sign will disappear if alarm is OFF.

SETTING OF TIME/CALENDAR

Press Mode Button thrice, if the Stop Watch is showing time of the day, seconds will start flashing. Press Split/Reset Button to make minute flash. Press Start/Stop Button to set the desired minutes. After the minutes are set, Press Split/Reset Button to make hour flash. Press Start/Stop Button to set the desired hours. While setting Hour, also set A (AM), P (PM), H (24Hr, Mode). After it is set Press Split/Reset Button, date will start flashing. Press Start/Stop Button to set the date. Press Split/Reset Button to flash the month. Press Start/Stop Button to set the month. Press Split/Reset Button, day of the week will flash. Press Start/Stop Button to set the day of the week. Press Split/Reset Button, it will now show the time with seconds flashing. Press Start/Stop Button to set seconds to 00. Press Mode Button to complete the setting.

SETTING OF ALARM

Press Mode Button twice if the Stopwatch is on time display mode. Hour will start flashing and after minutes A, P or H will appear. Press Start/Stop Button to advance the hour. After it is set to the desired hour in AM, PM or 24 Hr, mode, press Split/Reset Button, minute will start flashing. Press Start/Stop Button to advance the minute. After the minutes are set, press Mode Button to bring the Stopwatch in time display mode. Alarm is now set and the  sign will appear on the screen and the alarm is now ON. To switch ON/OFF the alarm, press Split/Reset and Start/Stop Button together to make alarm  sign appear or disappear.

STOP AND GO FUNCTION

In Stopwatch mode Start/Stop Button should be used to start and stop as many times as required.

LAP FUNCTION

Press Start/Stop Button to start and Split/Reset Button to stop. In stop mode the Stopwatch will continue to count but digits on the screen will be frozen. For each lap press Split/Reset Button twice. To reset to zero from Lap mode press Start/Stop Button and then Split/Reset Button twice.

REPLACEMENT OF BATTERY

When readout becomes dim or no longer display, it is time to replace the battery. Unscrew the back with the help of screw driver, remove the back cover. Replace the battery with the new one No. LR-44

CAUTION

Please ensure that the Stopwatch should be reset to zero before changing from Stopwatch mode to any other mode. Also never press the mode button when the Stopwatch is running.