



PE300BF and PE300BUV CERMAX® XENON SHORT ARC LAMPS



CERMAX

Key Features

- High-intensity illumination - 5000 Lumens
- Up to 6.6 Watts of UV output (<390 nm)
- Power range of 180-320 Watts
- 1000 hours lamp lifetime
- Broad spectral range with 5900° Kelvin color temperature

Applications

- Medical fiber optic illuminators
- Industrial fiber optic illuminators
- Machine vision
- Infrared and visible spotlights/beacons
- Spectroscopy
- Microscopy
- UV Curing
- Video projection

Cermax Xenon short arc lamps from Excelitas are ideal for applications that require a high degree of illumination control.

The Cermax® Xenon short arc lamp from Excelitas Technologies is an innovative lamp design in the specialty lighting industry. Cermax Xenon lamps were introduced in the early 1980s and are now used in diagnostic endoscopes in most major hospitals worldwide, in high brightness projection display systems, and for a wide variety of other high-performance applications.

The Cermax® Xenon lamps, Models PE300BF and PE300BUV, have an integrated parabolic reflector, enabling high intensity, focused output of ultraviolet, visible, and infrared radiation. With their internal reflector and rugged ceramic body construction, Cermax® Xenon lamps are the safest and most compact alternative to conventional quartz xenon lamps. Cermax lamps are ideal for applications that require a high degree of illumination control.

Current-regulated or power-regulated power supplies with output ripples of less than 5% are recommended. Single shot ignition pulses are advised because radio frequency starters may damage the lamps internal reflector.

In addition to lamps, Excelitas Technologies manufactures power supplies for Cermax® Xenon arc lamps, lamp holders, OEM lighting systems, and fiber optic light sources.

www.excelitas.com



PE300BF and PE300BUV
CERMAX® XENON ARC LAMPS

PE300BF and PE300BUV

Operational Specifications		
Description	Nominal	Range
Power	300 Watts	180-320 watts
Current	21 amps (DC)	10-22 amps (DC)
Operating Voltage	14 volts (DC)	13-16 volts (DC)
Ignition Voltage	23 kilovolts (recommended minimum)	
Temperature	150° C (Maximum)	
Lifetime*	1000 hours typical	

* End of life is defined as 50% of initial output

Initial Output at Nominal Power		
F= UV Filtered Output	UV= UV Enhanced Output	
Description	PE300BF	PE300BUV
Peak Intensity	515x10 ³ candelas	460x10 ³ candelas
Radiant Output*	50 Watts	50 Watts
UV Output*	2.6 Watts	6.6 Watts
IR Output*	28.8 Watts	26.8 Watts
Visible Output*	5000 Lumens	4500 Lumens
Color Temperature	5900 Kelvin	5050 Kelvin
Peak Instabilities	4%	4%
Beam Geometry**	5°/6°/7°	

* These values indicate total output in all directions. Wavelengths = UV<390 nm, IR>770 nm, Visible: 390 nm-770 nm

** Beam Geometry defined as the half angle at 10% PTS after 01/100/1000 hours

Physical Specifications	
Description	Specification
Arc Gap	0.049 inch (1.24 mm)
Reflector Geometry	Parabolic Y ² = 0.5 X (inch)
Weight	132 grams
Window Diameter	1.0 inch (25.4 mm)



PE300BF and PE300BUV
CERMAX® XENON ARC LAMPS

PE300BF

Focused Output with F/1.0 Lens		
Description	Visible Output	Total Output*
6 mm aperture	1410 Lumens	14 Watts
8 mm aperture	3130 Lumens	29 Watts


* Nominal values at 300 Watts after 2 hour burn-in.

NOTES:

1. Lamp must not be operated with window facing upwards within 45° of vertical.
2. Seal temperature must not exceed 150° C.
3. Current/power regulated power supplies and Excelitas lamp housing units are recommended.
4. Lamp must be operated within recommended current and power range. Over powering may lead to arc instability, hard starting and premature aging.
5. Hot mirror assembly is available for IR filtering.
6. CERMAX lamps are much safer lamps to use than their quartz xenon arc lamp equivalents. However, caution must be practiced when operating lamps because they are under high pressure, require high voltage, reach temperatures up to 200° C, and their IR and UV radiation can cause skin burn and eye damage. Read hazard sheet included with each lamp shipment.

Your Text


Mechanical Dimensions

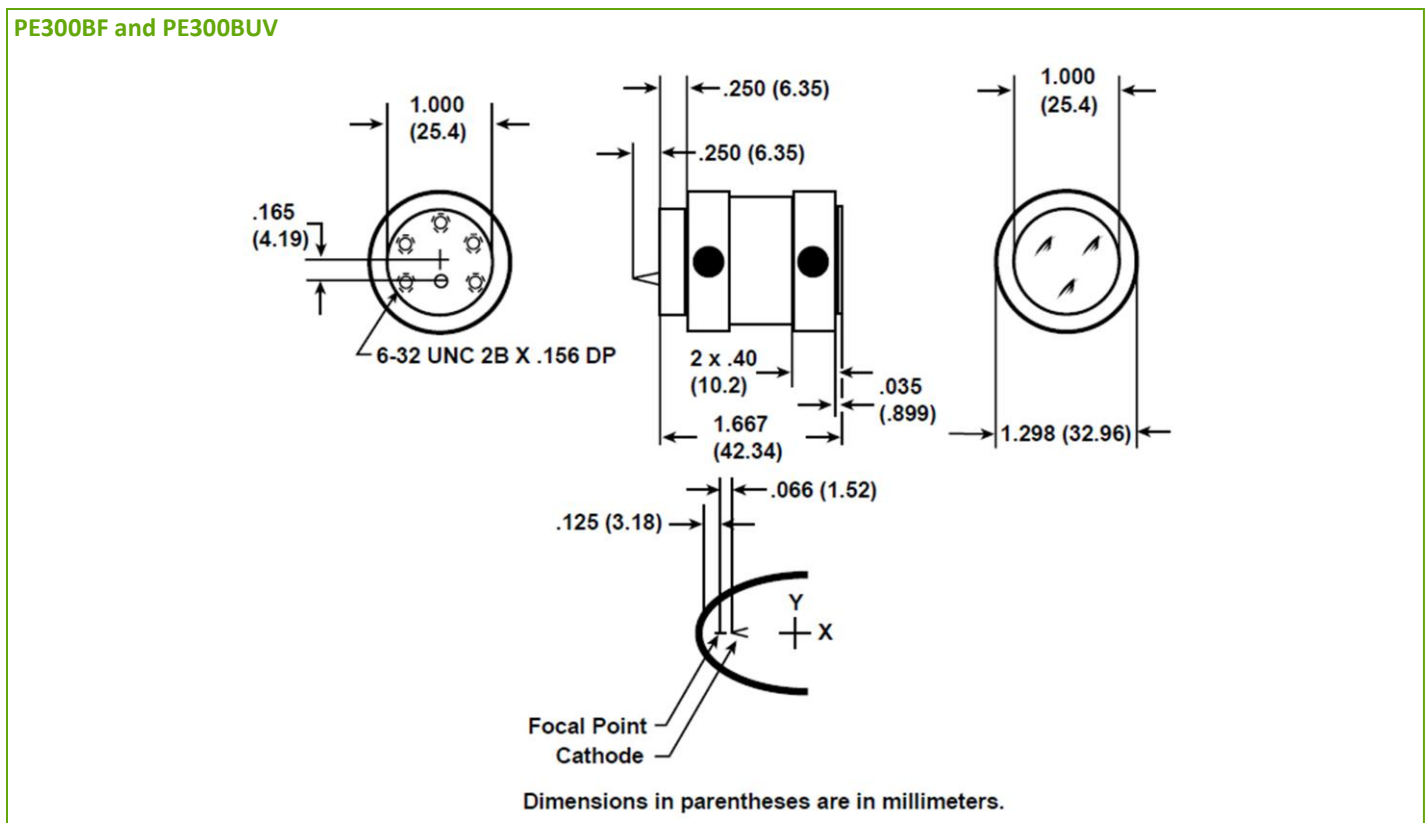



PE300BF and PE300BUV
CERMAX® XENON ARC LAMPS

Spectral Output

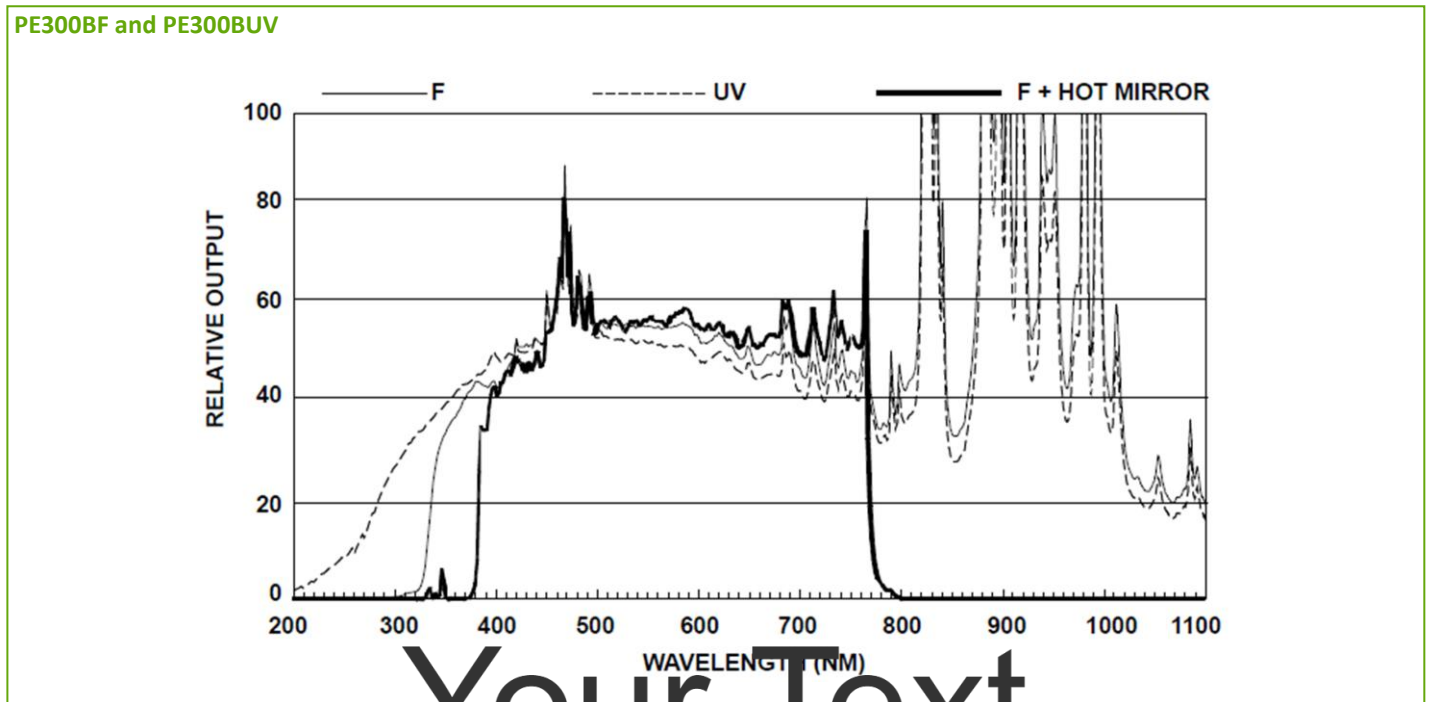

Your Text

About Excilite Technologies

Excilite Technologies is a global technology leader focused on delivering innovative, customized solutions to meet the lighting, detection and other high-performance technology needs of OEM customers.

From medical lighting to analytical instrumentation, clinical diagnostics, industrial, safety and security, and aerospace and defense applications, Excilite Technologies is committed to enabling our customers' success in their specialty end-markets. Excilite Technologies has approximately 3,000 employees in North America, Europe and Asia, serving customers across the world.

Excilite Technologies Illumination, Inc.
 44370 Christy Street
 Fremont, California
 94538-3180 USA
 Telephone: (+1) 510.979.6500
 Toll-free: (+1) 800.775.6786
 Fax: (+1) 510.687.1140
 shortarcxenon.na@excilite.com

Excilite Technologies Singapore, Private Limited.
 47 Ayer Rajah Crescent #06-12
 Singapore 139947.
 Telephone: (+65) 6775 2022 (Main Line)
 Telephone: (+65) 6770 4366
 (Customer Service Hotline)
 Fax: (+65) 6778-1752
 shortarcxenon.asia@excilite.com

Excilite Technologies GmbH & Co. KG
 Wenzel-Jaksch-Str. 31
 D-65199 Wiesbaden
 Germany
 Telephone: (+49) 611 492 430
 Fax: (+49) 611 492 165
 shortarcxenon.europe@excilite.com

Japan Excilite Technologies
 East Tower 4th Floor,
 Otemachi First Square
 1-5-1 Otemachi, Chiyoda-ku,
 Tokyo 100-0004
 Telephone: (+81) 3-5219-1228
 Fax: (+81) 3-5219-1201

For a complete listing of our global offices, visit www.excilite.com/locations

© 2011 Excilite Technologies Corp. All rights reserved. The Excilite logo and design are registered trademarks of Excilite Technologies Corp. All other trademarks not owned by Excilite Technologies or its subsidiaries that are depicted herein are the property of their respective owners. Excilite reserves the right to change this document at any time without notice and disclaims liability for editorial, pictorial or typographical errors.