




MEXTECH™

INSTRUMENTS OF TOMORROW



DIGITAL EARTH RESISTANCE TESTER DET-99C

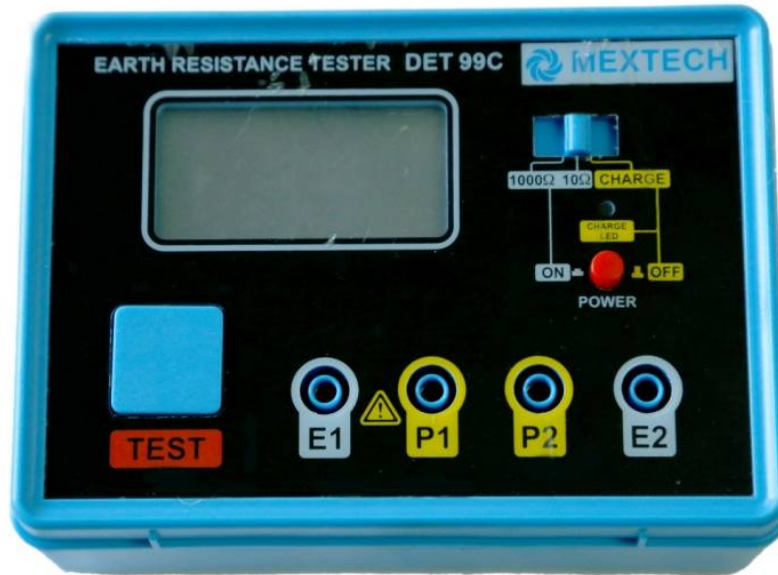

Application:

'MEXTECH' Digital Earth Resistance Tester is designed to measure the resistance of earth used in power circuit, Telecommunications, Railway Electrification, Domestic and Industrial electrical installations. The tester measures directly the resistance of the earth and also measures the ground resistivity. The study, elegant and compact body makes the instrument portable, easy to use, Hand-held instrument.

Specification

Measuring Range 0 – 1000 Ω (10 Ω , 1000 Ω)

Features:

Rugged ABS body

Easy to use hand held meter

Four terminals E1, P1, P2, E2

Low battery indication

Earth Resistance & Earth Resistivity Function



Technical Details:

Display : 3½ Digits, LCD

Power supply: 8 x 1.2V Rechargeable cells with 230V AC adapter

Dimensions (in mm) : 139 x 97 x 49 mm (Approx.)

Weight : 575 gm (Approx.)

Accessories:

Standard Accessories :

(i) Carrying Case (ii) Instruction Manual (iii) 8pcs 1.2V Batteries + Battery charger

Optional Accessories :

(at extra cost) :

• 4 Nos. M. S. Spike (18 Inch Length) • 1 Nos. Hammer • 4 Nos. Cable (25 feet) • 1 Nos. Screwdriver, all packed in one earth testing kit bag