

Sugar-Free Drinks

Diet Drinks

Diluted Soluble Cutting Oils

Molding Agents

Specially developed for very low concentration solutions, Brix 8% or less!!

Hand-held Refractometer
(For very low concentration samples)

N-8α

Cat.No.2360

New



Applications

- Food industry :**
Sugar-Free, Diet drink, very thin soup etc.
- Chemical Industry :**
Highly diluted soluble cutting oils and molding agents

Measuring Method




①Place a couple of drops of sample onto the prism.



②Close the day-light plate gently.



③Look through the eyepiece and measure the value.

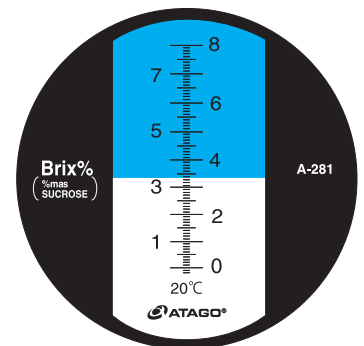

Features

- **Bright, High Contrast scale view**
- **Scale memory lines are wider for cleaner reading of the boundary line**
- **Requires just one or two drops of sample**
- **Quick & easy measurements**

Specifications

Measurement range: Brix0.0 to 8.0%
Minimum scale : 0.1%
Dimensions : 4(W)×4(D)×21(H)cm
Weight : 260g

All ATAGO refractometers are designed and manufactured in Japan.

HACCP GMP GLP ATAGO products comply with HACCP, GMP, and GLP system standards.

ATAGO CO.,LTD.

Headquarters: The Front Tower Shiba Koen, 23rd Floor
2-6-3 Shiba-koen, Minato-ku, Tokyo 105-0011, Japan
TEL : 81-3-3431-1943 FAX : 81-3-3431-1945
overseas@atago.net http://www.atago.net/

ATAGO U.S.A., Inc.

TEL : 1-425-637-2107 customerservice@atago-usa.com

ATAGO INDIA Instruments Pvt. Ltd.

TEL : 91-22-2833-8038 / 8076 customerservice@atago-india.com

ATAGO (THAILAND) Co., Ltd.

TEL : 662-982-8718-9 customerservice@atago-thailand.com

ATAGO BRASIL Ltda.

TEL : 55 16 3916-6000 customerservice@atago-brasil.com

ATAGO ITALIA s.r.l.

TEL : 39 2 36557267 customerservice@atago-italia.com

ATAGO CHINA Guangzhou Co., Ltd.

TEL : 86 20-38106065 info@atago-china.com



* Specifications and appearance are subject to change without notice.